


### SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

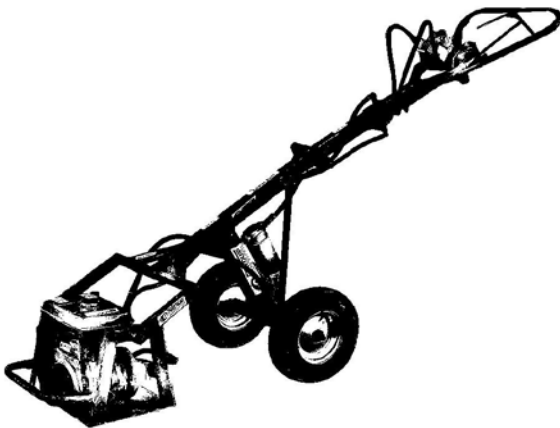

### When Operating

Position borer where hole is to be bored using self drive hydraulic lever (some models only)

Lock wheels with levers attached to wheels (some models only)

Activate hydraulic hand lever to rotate borer

Release to stop

Apply a slight downward pressure onto machine and hold steady

Keep drawing out the auger from the hole to clear the excavated earth

### Required Safety Equipment



Boots



Ear Muffs



Gloves



Protective Clothing



Visual Inspection

### Pre Start Checks and Safety

- Check auger size for machine and job
- Check cutters on Auger
- Check engine oil level/Hydraulic oil level
- Check fuel tank is full (straight petrol)
- Avoid wearing any loose clothing that may tangle in the Auger
- Use only in a well ventilated area
- Securely hold the machine with both hands
- Stop engine when refueling
- Check for power cables, water pipes and tree roots etc before boring holes
- Take extra care on wet slippery surfaces

### Starting procedure

Turn on fuel supply

Turn on engine switch

Choke engine (cold start)

Pull starter cord out until a slight resistance is felt, let starter recoil and give sharp pulls till engine fires or starts

Release choke

If required re pull starter cord out until a slight resistance is felt, let starter recoil and give sharp pulls till engine starts

Allow engine to warm up

To Fit Auger: position auger into coupling on hydraulic drive motor

Push up collar and release to lock auger into position

Lift up machine to check that auger is fully locked into position

### Stopping and After Use

Turn off engine switch or push stop button

Turn off fuel supply

Push up collar and release auger from machine