


SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.



For TILLING ONLY (soft or previously tilled ground)

Required Safety Equipment

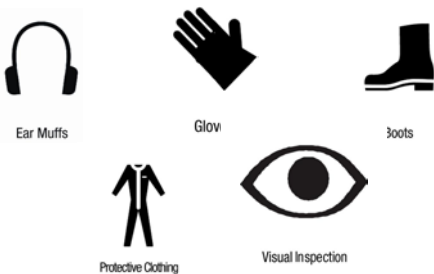

Pre Start Checks and Safety

- ! Fuel tank is full (straight petrol)
- ! Check engine oil is up to required mark
- ! Check transmission oil level
- ! Check condition of tines
- ! Ensure area to till is free of all rubble and debris
- ! Keep children clear of working area
- ! Stop engine to refuel
- ! Do not spill fuel
- ! Keep hands and feet clear of tines while machine is running
- ! Stop engine to clear tines
- ! Don't touch hot engine

When Operating

Adjust tilling depth lever to the desired depth

Adjust handle bar height to a comfortable position

Note: The clutch is engaged by pulling in the clutch lever and disengaged by releasing the lever (this starts and stops the tine rotation)

Increase engine speed to the desired position Should the machine jerk forward while tilling, press down on the handle bars

Starting procedure

Turn fuel tap to on

Turn ignition switch to run

Pull out choke

Move throttle to start position

Make sure the transmission is in neutral

Pull starter briskly to start the engine

Push choke in and allow the engine to warm up

Stopping and After Use

Disengage clutch (release the lever)

Select neutral

Move throttle lever to idle

Turn the ignition switch to off

Turn fuel tap off