


SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

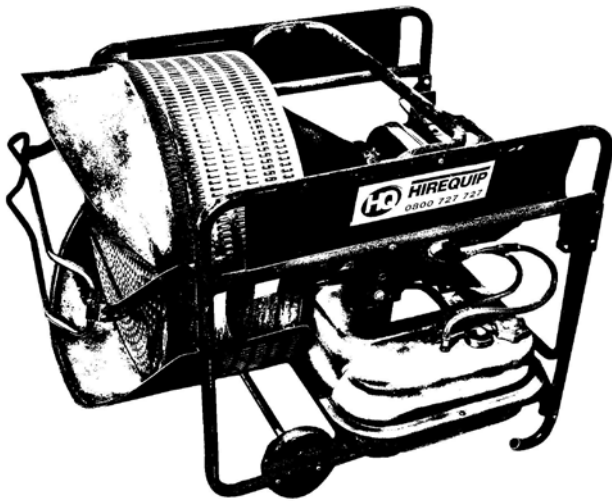

When Operating

Do not place heater too close to flammable materials, or where dust can be stirred such as wood dust etc
Place heater at a minimum distance of 3m from obstructions
To be used on the floor or ground only
Position in a well ventilated area to supply a sufficient supply of oxygen for perfect combustion
Adjust angle as required with vertical and horizontal adjustments

Required Safety Equipment



Shock Protection



Toxic



Visual Inspection

Pre Start Checks and Safety

- ! Ensure the machine has a current Electrical Code of Compliance
- ! Fuel tank is full (Diesel, Kerosene, Domestic oil fuel)
- ! When transporting ensure machine is well secured down as damage may be caused to the conical insulator inside
- ! Do not place machine in the area of explosives or easily flammable materials
- ! Do not refuel machine while it is running
- ! Do not position machine too close to human traffic
- ! Safety guard off area to be used in to prohibit people from getting too close
- ! Do Not Touch Machine will become very hot

Starting procedure

Plug machine into the power supply
Switch on machine (**Note:** Abnormal noise will fade in 20-30 seconds)
If machine doesn't fire in 30 seconds, misfire lamp will be on and operation will be stopped
Switch off, then switch on again, if necessary, repeat till ignition starts
Should machine ignite and is then followed by a misfire and stop, repeat above
If machine still fails to ignite and continue running, remove flame monitor cover and wipe clean with a dry clean cloth

Stopping and After Use

Switch off at main switch on rear of machine
Do not pull out plug from power supply before the fan stops and the operation and light goes off (**Cool down period is approx 3 minutes**)