


SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

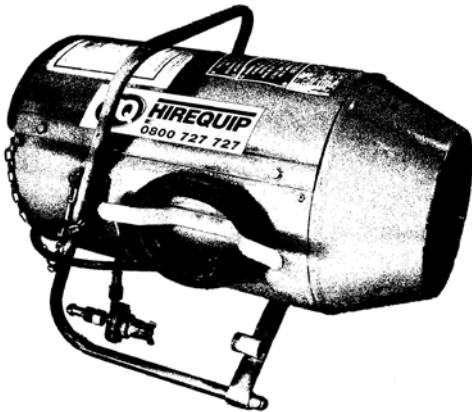

Required Safety Equipment



Shock Protection



Toxic



Visual Inspection

Pre Start Checks and Safety

- ! Ensure the machine has a current Electrical Code of Compliance
- ! Check gas quantity (LPG only)
- ! Check heater is positioned in a safe location
- ! Ensure safety guards are used to keep personnel away
- ! Use the correct number and type of cylinders
- ! Ensure all fittings are tight
- ! LPG heaters by law may not be used in Marquees
- ! Heaters may be used in well ventilated public places, but only with approved guards
- ! Beware of using near any flammable materials
- ! Ensure Nylon or flammable loose clothing is kept well clear
- ! Keep children away from heaters
- ! Never use in confined spaces
- ! Check for leaking or damaged bottles and connections

When Operating

Heat output can be adjusted by adjusting the pressure regulator
Turn clockwise to increase heat output and anti clockwise to decrease output

Starting procedure

Connect heater gas regulator to LPG cylinder and ensure you have a tight connection
Turn on gas at cylinder and heater
Test supply hose, regulator and fittings for leaks with a soapy water solution
Connect power lead to power point and switch on
Turn fan switch to on
Depress gas prime valve knob for 10 15 seconds and continue to hold while you press and release the ignition button intermittently until burner lights
Continue to hold the gas prime valve knob down for a further 20 30 seconds while burner is alight and then release
Should burner go out, repeat the process

Stopping and After Use

Turn off gas supply at cylinder valve
Allow 2 3 minutes for heater to cool down
Switch fan off
The heater can now be unplugged and disconnected from LPG cylinder