


SAFETY FIRST:

If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

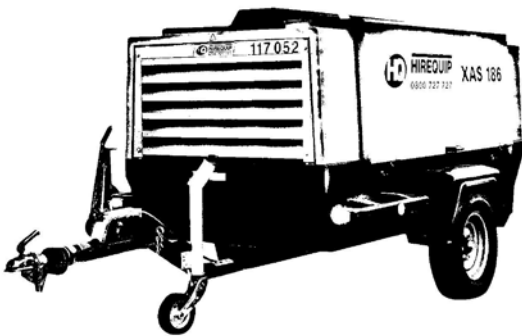

Required Safety Equipment



Ear Muffs



Gloves



Boots



Protective Clothing



Face Shield



Visual Inspection

Pre Start Checks and Safety

- ! Maximum towing speed is 90km/hr
- ! Fuel tank is full (Diesel fuel)
- ! Engine oil level is at the correct mark on dip stick
- ! Ensure the compressor unit oil is at the correct level (some models have a sight glass)
- ! Check radiator water level
- ! Position machine level
- ! Employ safe working practices
- ! Do not use in a confined space good ventilation is essential
- ! Use the correct size hosing to suit the job
- ! Never use frayed, damaged or deteriorated hose
- ! Never use compressed air for breathing unless used through a proper filtration unit

Pre Start Checks and Safety Con't

- ! Running machine with the canopy doors open will cause overheating
- ! Compressed air is dangerous, treat with extreme care and never blow onto body
- ! Never allow air to blow through a loose ended hose
- ! Ensure hose ends are secured

When Operating

Close all side canopy doors etc for cooling of the machine to work correctly
Connect air supply lines to the outlet taps
Wire twist couplings together to avoid a hose blowing off
Open air taps slowly once appliance is connected

Starting procedure

Open one air delivery tap to release pressure and allow it to be started without any load
Preheat engine with glow plug option (if applicable)
Operate start switch to start engine (some models have 2 buttons – 1 for start and the other for the safety systems installed, on these models only release the safety button once the warning lights have gone out
When compressor starts close the air delivery tap
Allow the engine to warm up at no load for 3 to 5 minutes
Press compressor load button (on some models no air will be supplied until this is pressed)

Stopping and After Use

Close the air outlet taps and allow the unit to run unloaded for some minutes
Turn compressor off
Disconnect all hoses and appliance/tools